

Lab1: getting started with LoPy

Marco Zennaro, PhD
ICTP



Labs

- 1/3 Ready to use, tested examples
- 1/3 Exercise based on the examples
- 1/3 Your imagination → create new applications

Lab alert

The number of variables in the lab settings is huge
(computer operating system, firewall, device
firmware version, code version, network, etc)

Things will go wrong :-)

Be patient, we will solve all issues!

Found a bug? Let me know! Feedback is welcome.

Our Lab equipment

Pycom LoPy 4

PySense


microUSB Cable



LoPy


PySense

Workflow: Atom

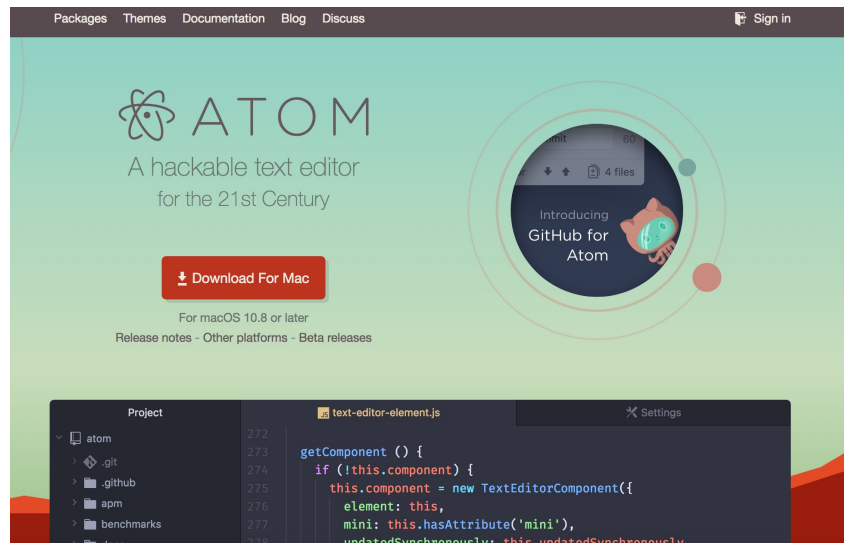


Please install from www.atom.io
or update to the latest version.

Workflow: install the pymakr package

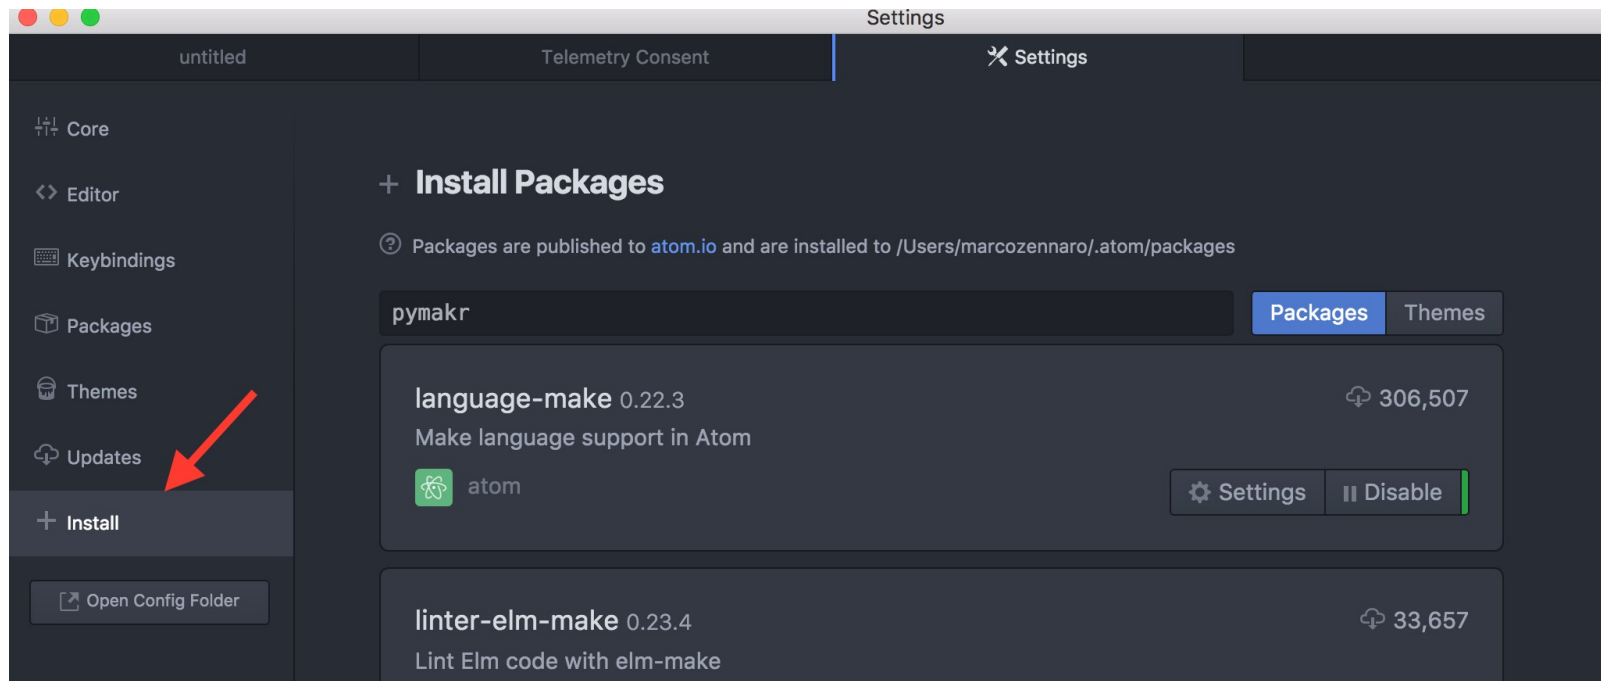


Preferences → Settings → Install → search **pymakr**
Different on Windows, Mac, Linux

Workflow: connect board via USB

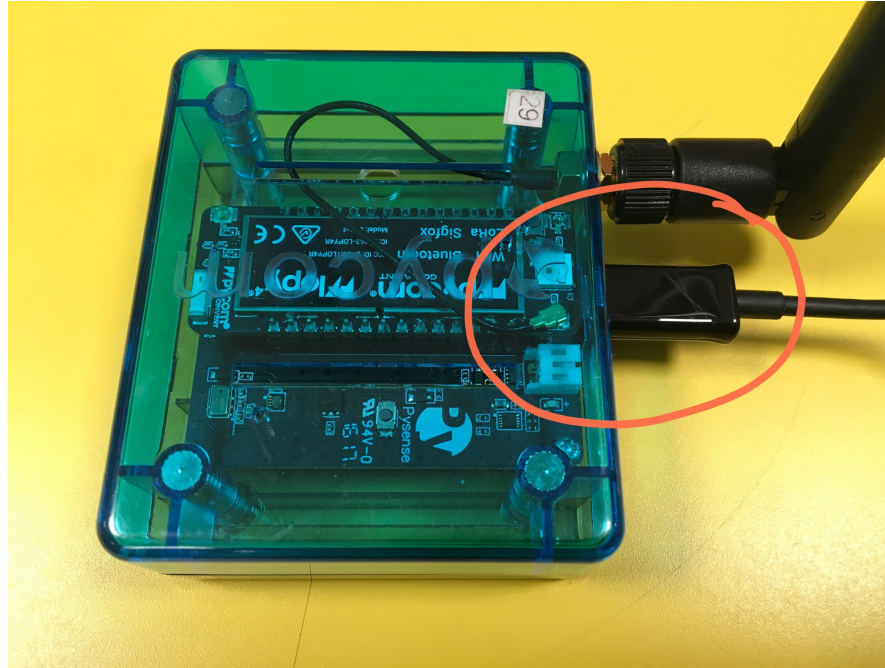


Make sure the LED and the microUSB are on the same side!

Workflow: connect!

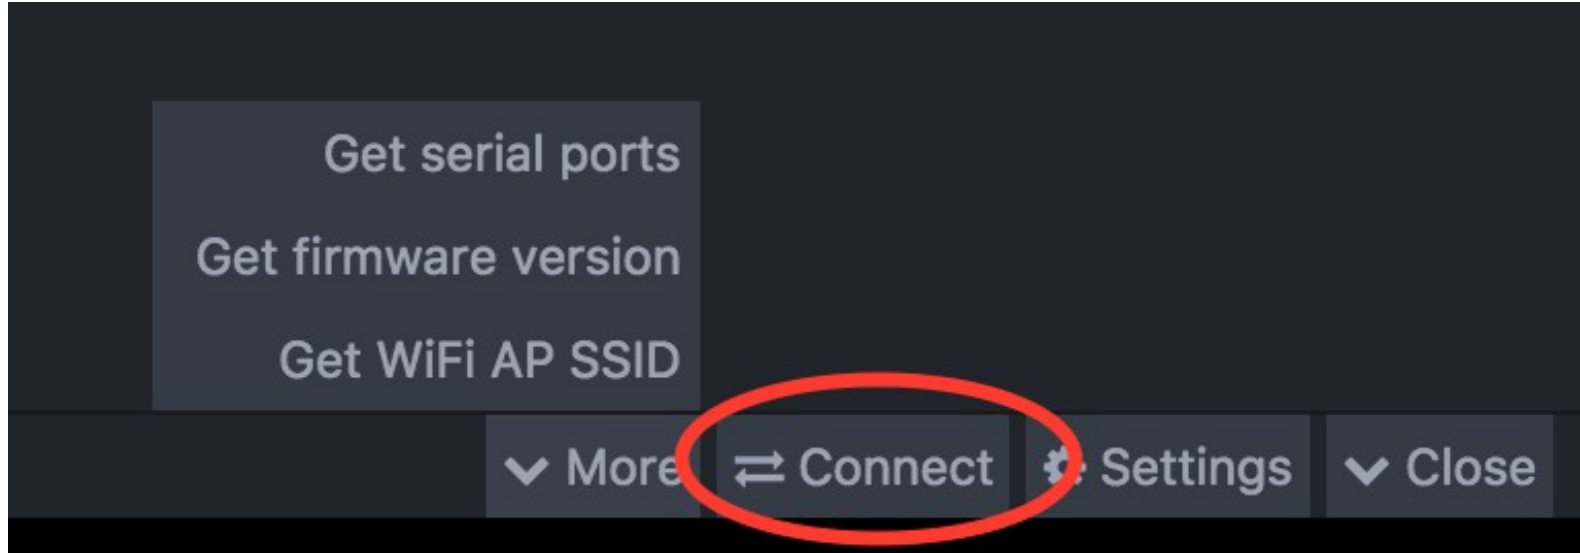

Click on Connect

Workflow: REPL

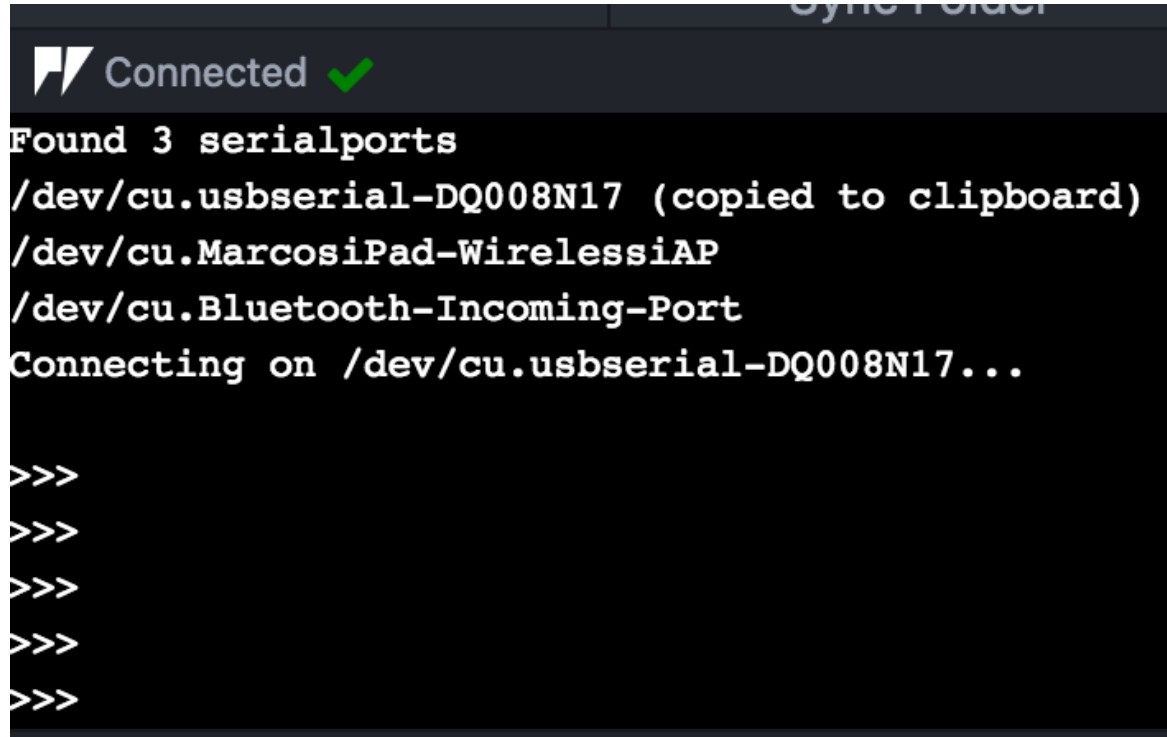

```
Connected ✓  
Found 3 serialports  
/dev/cu.usbserial-DQ008N17 (copied to clipboard)  
/dev/cu.MarcosiPad-WirelessiAP  
/dev/cu.Bluetooth-Incoming-Port  
Connecting on /dev/cu.usbserial-DQ008N17...  
  
>>>  
>>>  
>>>  
>>>  
>>>
```

REPL console

REPL stands for Read Print Eval Loop. Simply put, it takes user inputs, evaluates them and returns the result to the user.

You have a complete python console! Try to enter `>>> 2+2` and press Enter.

Now enter: `>>> print("Hi! I am a python shell!")`

Executing code



There are three ways to execute code on a Pycom device:

- 1) Via the **REPL** shell. Useful for single commands and for testing.

REPL example

The `os` module can be used for further control over the filesystem. First import the module:

```
>>> import os
```

Then try listing the contents of the filesystem:

```
>>> os.listdir()
```

REPL example

You can make directories:

```
>>> os.mkdir('dir_iotlab')
```

And remove entries:

```
>>> os.remove('data.txt')
```

REPL example

If a device's filesystem gets corrupted, you can format it by running:

```
>>> import os
```

```
>>> os.mkfs('/flash')
```


Executing code

2) Using the **Run** button. Code that is open on the Atom editor will be executed, but will **not be stored in the device**.



If you reboot, the code will not be executed again.


Executing code

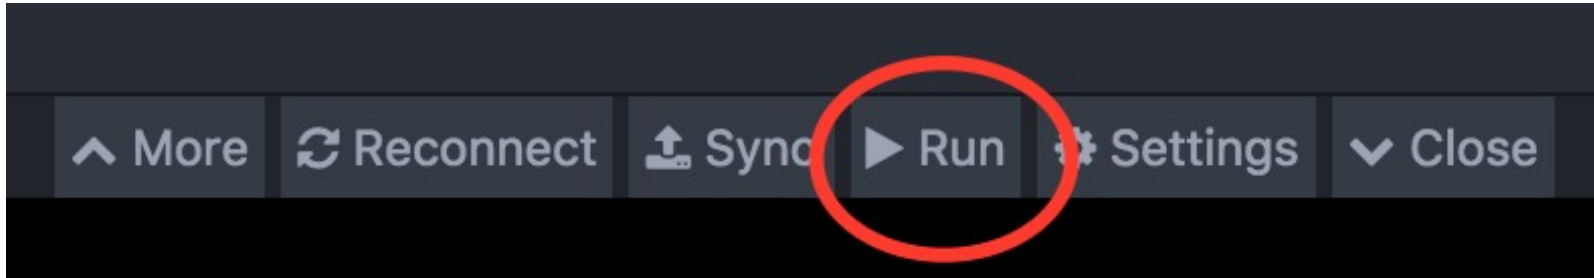


Executing code

3) **Synching** the device with the **Project folder** in Atom. In this way, the code is stored in the Pycom device and will be executed again if you reboot the device.

Workflow: project folder

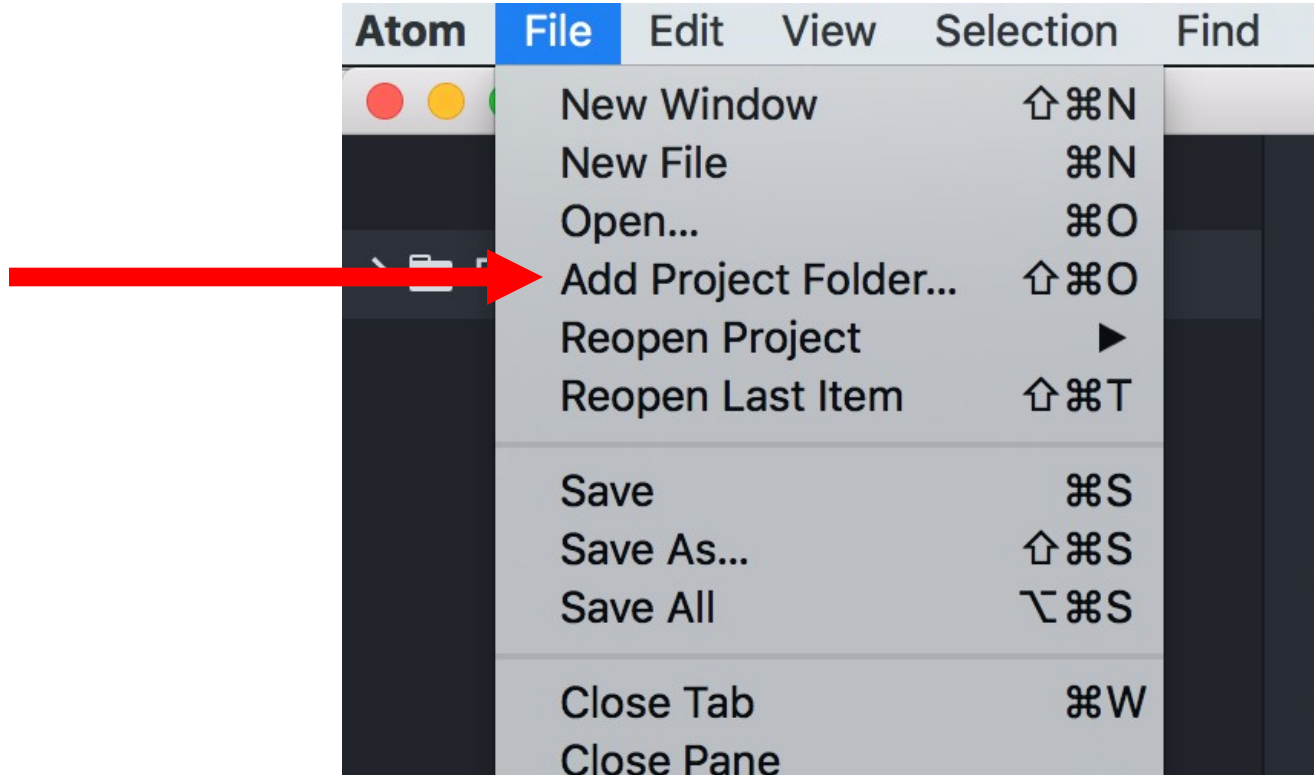

Workflow: ONE project folder

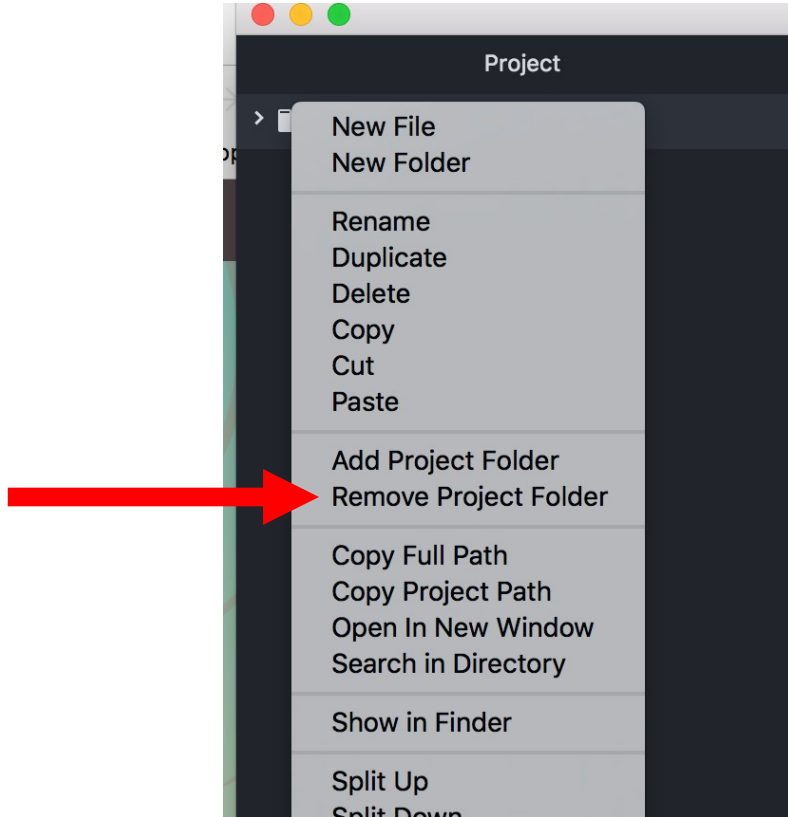

It is easier if you only have one Project folder. Make sure you Remove any other Project folders and **keep only the one you want to use.**


Workflow: project folder

The Project folder should contain all the files to be synched with the device.


You should always have two files: **boot.py** (executed at boot time) and **main.py** (containing the main code).

The folder can also include libraries and other python files.

Workflow: example of project folder

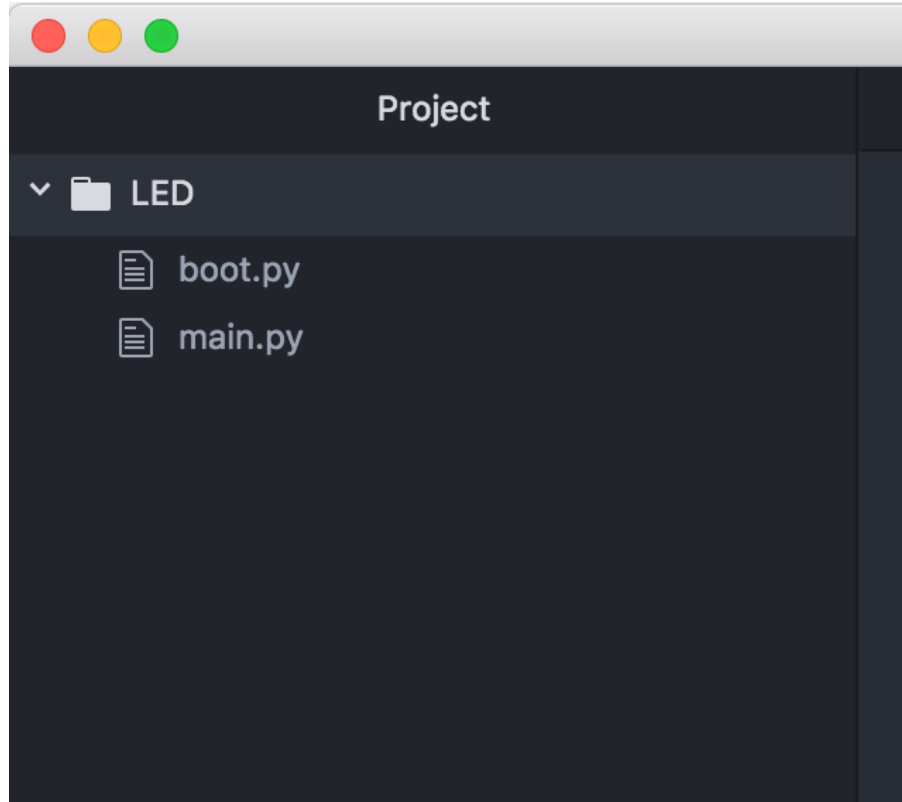

Workflow: upload project folder

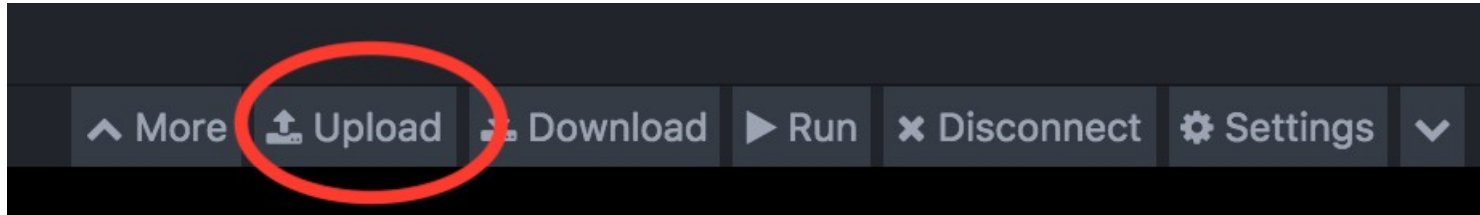

Workflow: useful Atom settings

Settings → Global Settings



Autoconnect on USB

Ignores any 'device address' setting and automatically connects to the top item in the serialport list



Upload all file types

If enabled, all files will be uploaded no matter the file type. The list of file types below will be ignored

Workflow: useful Atom settings



Open on start

Automatically open the pymakr console and connect to the board after starting Atom



Safe-boot before upload

[Only works with firmware v1.16.0.b1 and up.] Safe boots the board before uploading to prevent running out of memory while uploading. Especially useful on older boards with less memory, but adds about 2 seconds to the upload procedure



Reboot after upload

Reboots your pycom board after any upload or download action

Workflow: boot.py

The boot.py file should always start with following code, so we can run our Python scripts over a serial connection (USB).

```
from machine import UART
import os
uart = UART(0, 115200)
os.dupterm (uart )
```

Alternative to Atom: mpy-repl-tool

mpy-repl-tool is a software tool that you can use to connect and control a LoPy via the command line

<http://mpy-repl-tool.readthedocs.io/en/latest/index.html>

To install it you have to execute:

```
$ python3 -m pip install mpy-repl-tool
```

Alternative to Atom: mpy-repl-tool

This command will list the serial ports and “hopefully” will automatically find your LoPy board.

```
$ python3 -m there detect
```

To get a list of the files on the LoPy run:

```
$ python3 -m there ls -l /flash/*
```

Alternative to Atom: mpy-repl-tool

To upload the code files from your computer to the LoPy:

```
$ python3 -m there push *.py /flash$ python3 -m
```

To start a serial terminal and get access to the REPL:

```
$ python3 -m there -i
```


Connect to a LoPy via WiFi

If you have driver issues (eg running Windows 7), you can have access the LoPy via a WiFi connection.

Your LoPy by default works as a WiFi access point. Search an SSID that looks like lopy-wlan-XXXX; the password is www.pycom.io; connect to it.

On the back of each device you can find the last 4 characters of the LoPy AP name.

Connect to a LoPy via WiFi

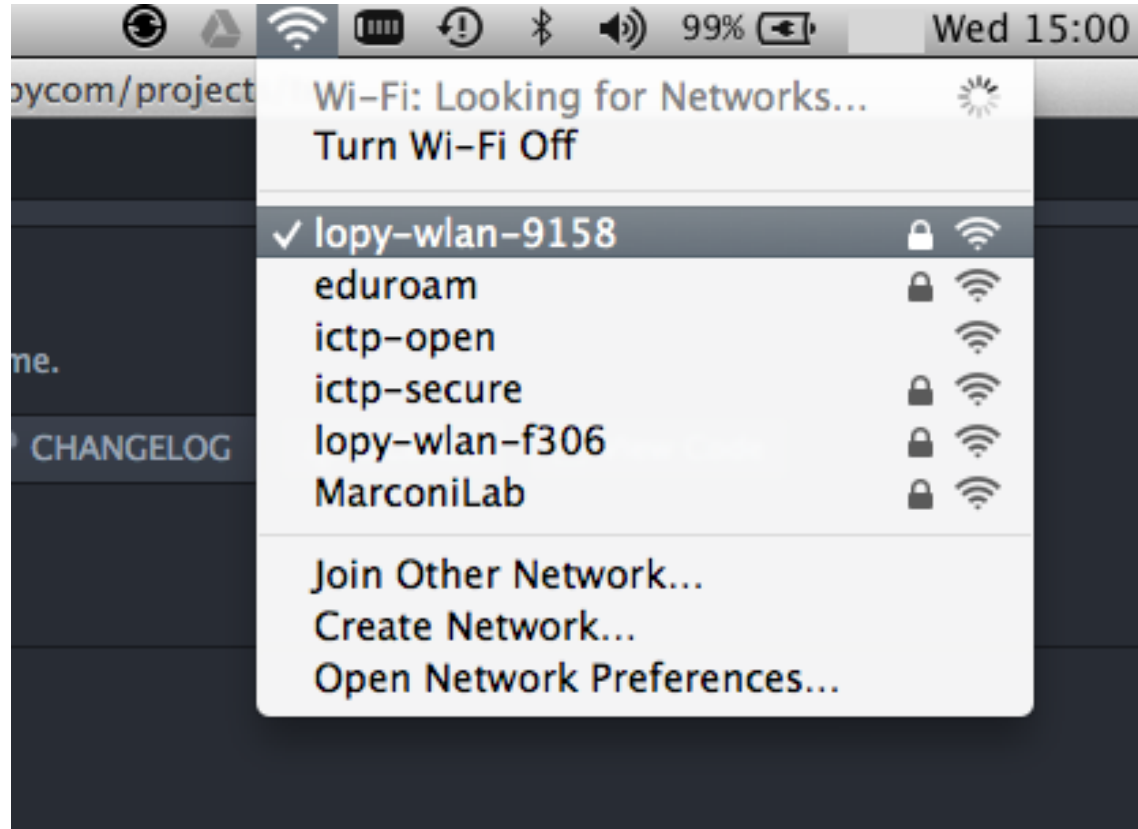

Connect to a LoPy via WiFi

To tell Atom to connect via WiFi instead of via USB,

Settings → Global Settings → Device Address

Enter: 192.168.4.1

You are now connected to the LoPy via WiFi.

Resetting

They are different ways to reset your device. Pycom devices support both **soft and hard resets**.

A soft reset clears the state of the MicroPython virtual machine but leaves hardware peripherals unaffected. To do a **soft reset**:

press Ctrl+D on the REPL

Resetting

A **hard reset** is the same as performing a power cycle to the device. In order to hard reset the device, press the reset switch or run:

```
>>> import machine
```

```
>>> machine.reset()
```

LED


LED

In this example, we will create and deploy the proverbial 1st app, “Hello, world!” to a Pycom device.

LoPys don’t have screens!


The LoPy module has one LED (big, white LED on the same side as the microUSB).

LED

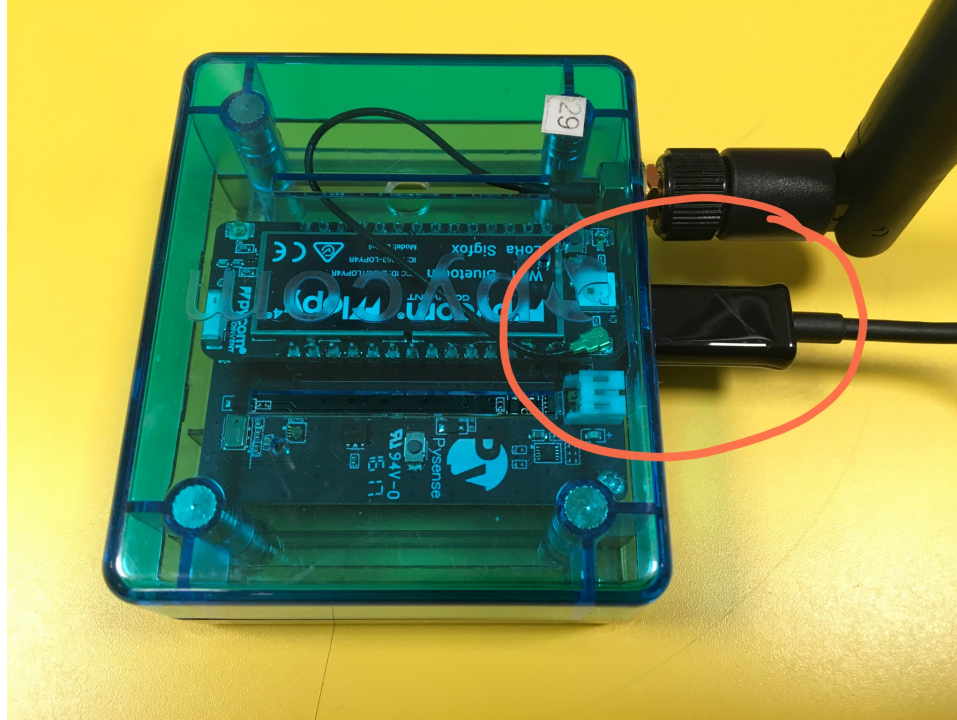

LED

Check the **LED folder** and sync the two files to your active project folder.

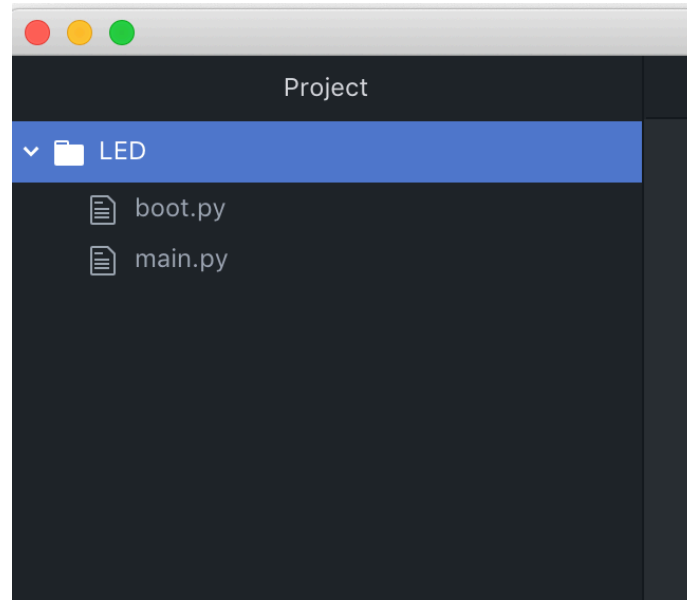

LED example, part 1

```
import pycom
```

Import the python libraries needed

```
import time
```

```
pycom.heartbeat(False)
```

Set OFF the heartbeat (the LED turns blue to show that the device is alive) as we will change the color of the LED

LED example, part 1

for cycles in range(10):

Execute 10 times

pycom.rgbled(0x007f00) # green

Change LED color to green, yellow and red

time.sleep(5)

Sleep for 5 seconds each time

pycom.rgbled(0x7f7f00) # yellow

time.sleep(5)

pycom.rgbled(0x7f0000) # red

time.sleep(5)

LED: Exercises

- 1) Use the LED to simulate a traffic light (red, yellow and green lights)
- 2) How fast can the light blink? (modify the sleep time)
- 3) Try to change the color of the LED gradually (from yellow to red, for example)

PySense

PySense: high-level modules

In this lab, we will provide a series of examples to use the sensors in the PySense module.

Pycom provides a library abstracting the implementation details of sensor chips. This library is already included in labs code under the “lib” folder of each example.

PySense: high-level modules

accelerometer in `Code/pysense/acceloremeter`

ambient light in `Code/pysense/ambient-light`

temperature and atmospheric pressure in
`Code/pysense/temp-bar`

temperature and humidity in `Code/pysense/temp-hum`

PySense: Exercises

- 1) Find where the light sensor is located on the Pysense board. Use the datasheet (in the Code folder) or the Pycom website.
- 2) Change the color of the LED based on light measurements (no light → red, strong light → green)

Summary

We introduced the Pycom workflow.

We learned how to change the color of the LED and read values from the PySense.

We looked at alternatives to Atom and to the serial connection.

Feedback?

Email mzennaro@ictp.it